



# BREAK JOINT PLATE LOCATION DETAILS


SR

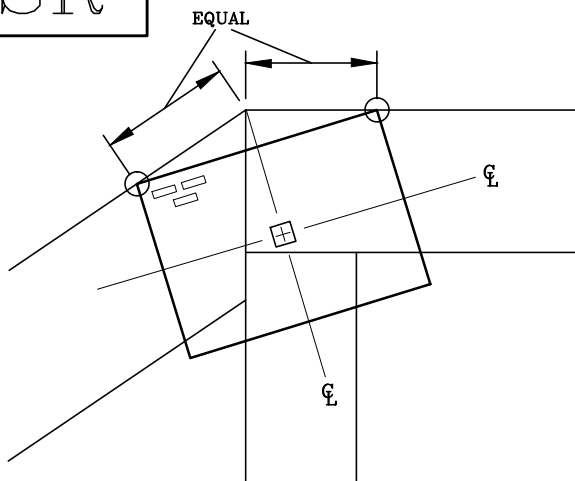


SR

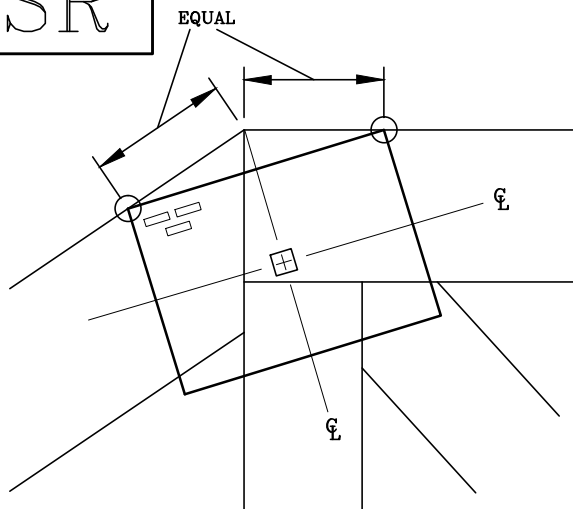


SR

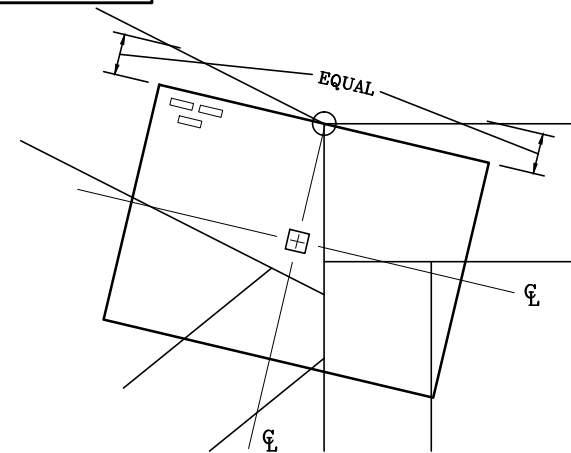


SR

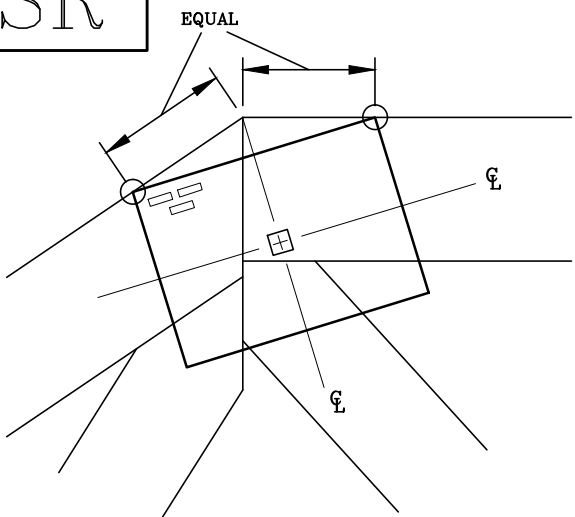

SR

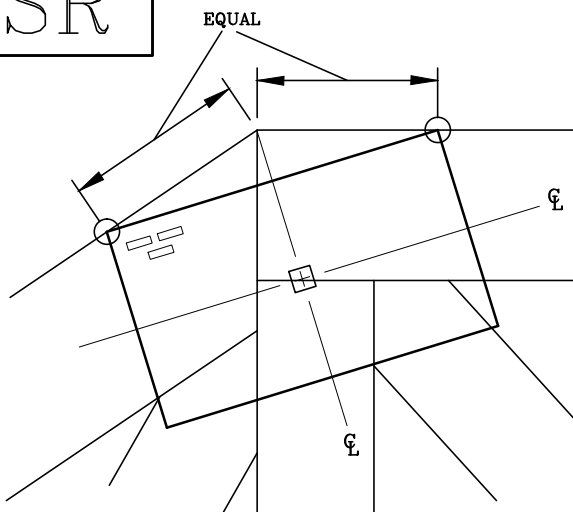

SRS

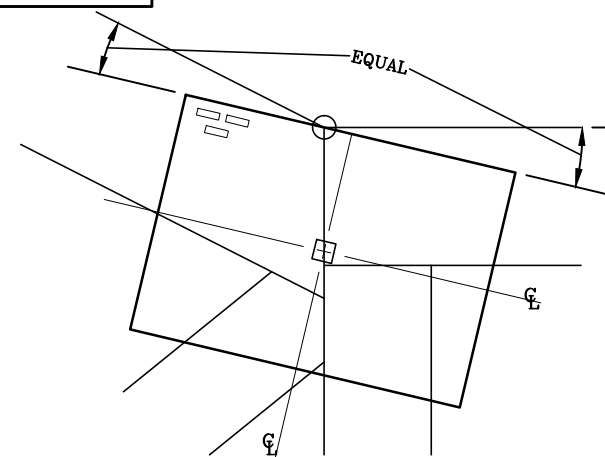

NOTES:  
 PLATE IS ALIGNED ALONG THE BISECTOR OF THE PITCH BREAK ANGLE.  
 ○ LOCATES PLATE CORNER OR FLUSH EDGE.  
 □ LOCATES PLATE CENTER.

BREAK JOINT

160  
SR

PAGE 1 OF 1  
DATE 10/01/14